


PARKING SENSOR SYSTEM

0922-5a

IGNITION SWITCH (IG1) ← @1
 (SECTION 0921-1a)
 IG1 RELAY ← @2
 (SECTION 0921-2a)

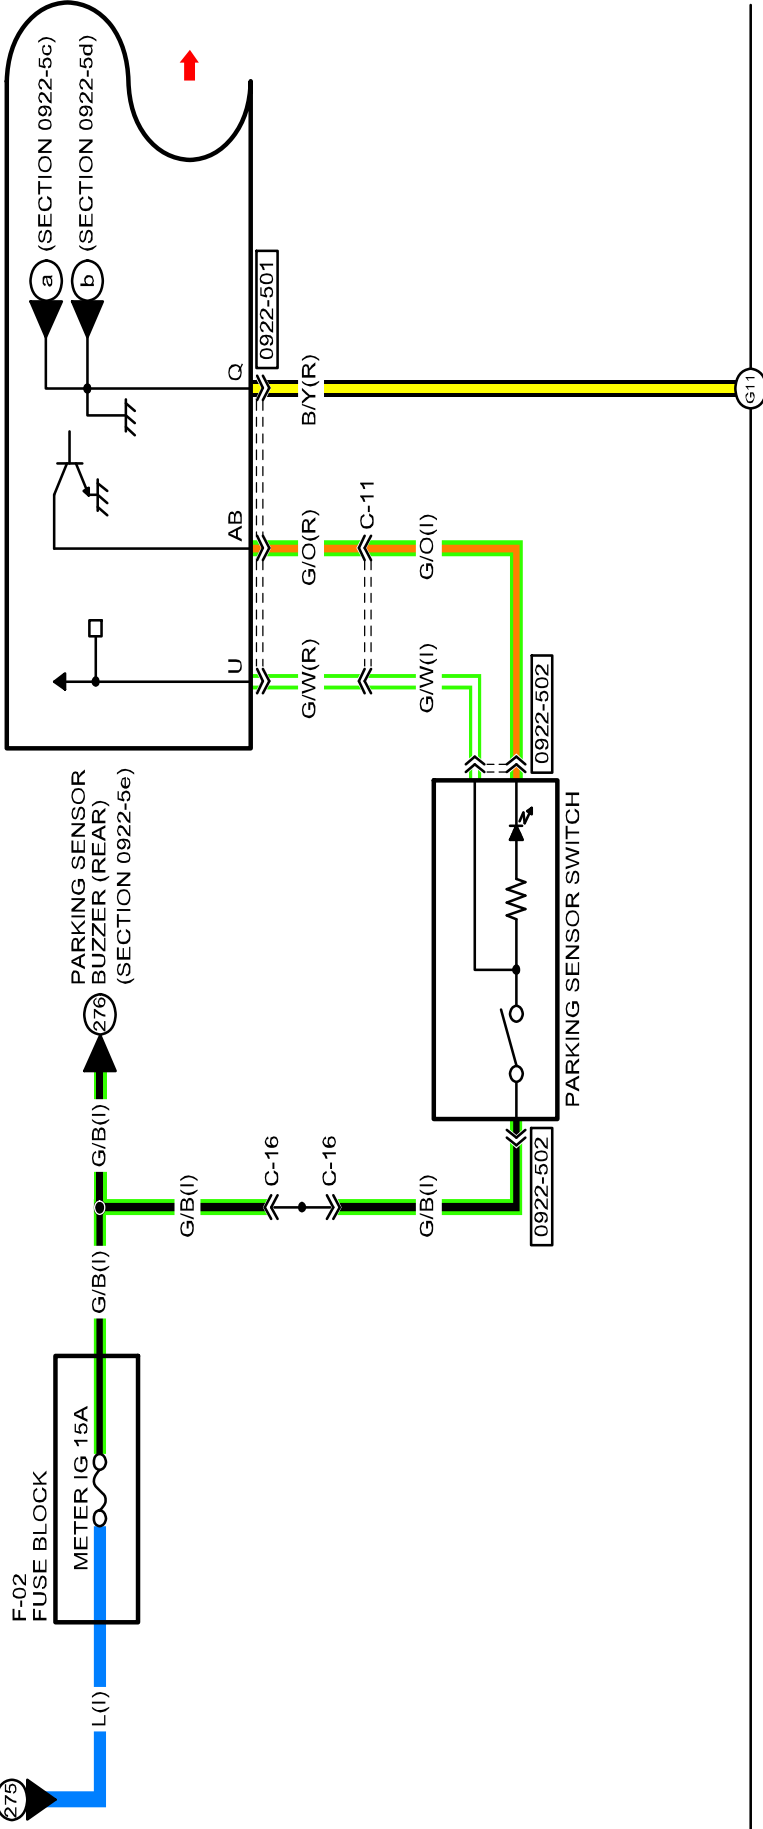








@1 : WITHOUT ADVANCED KEYLESS SYSTEM
 @2 : WITH ADVANCED KEYLESS SYSTEM
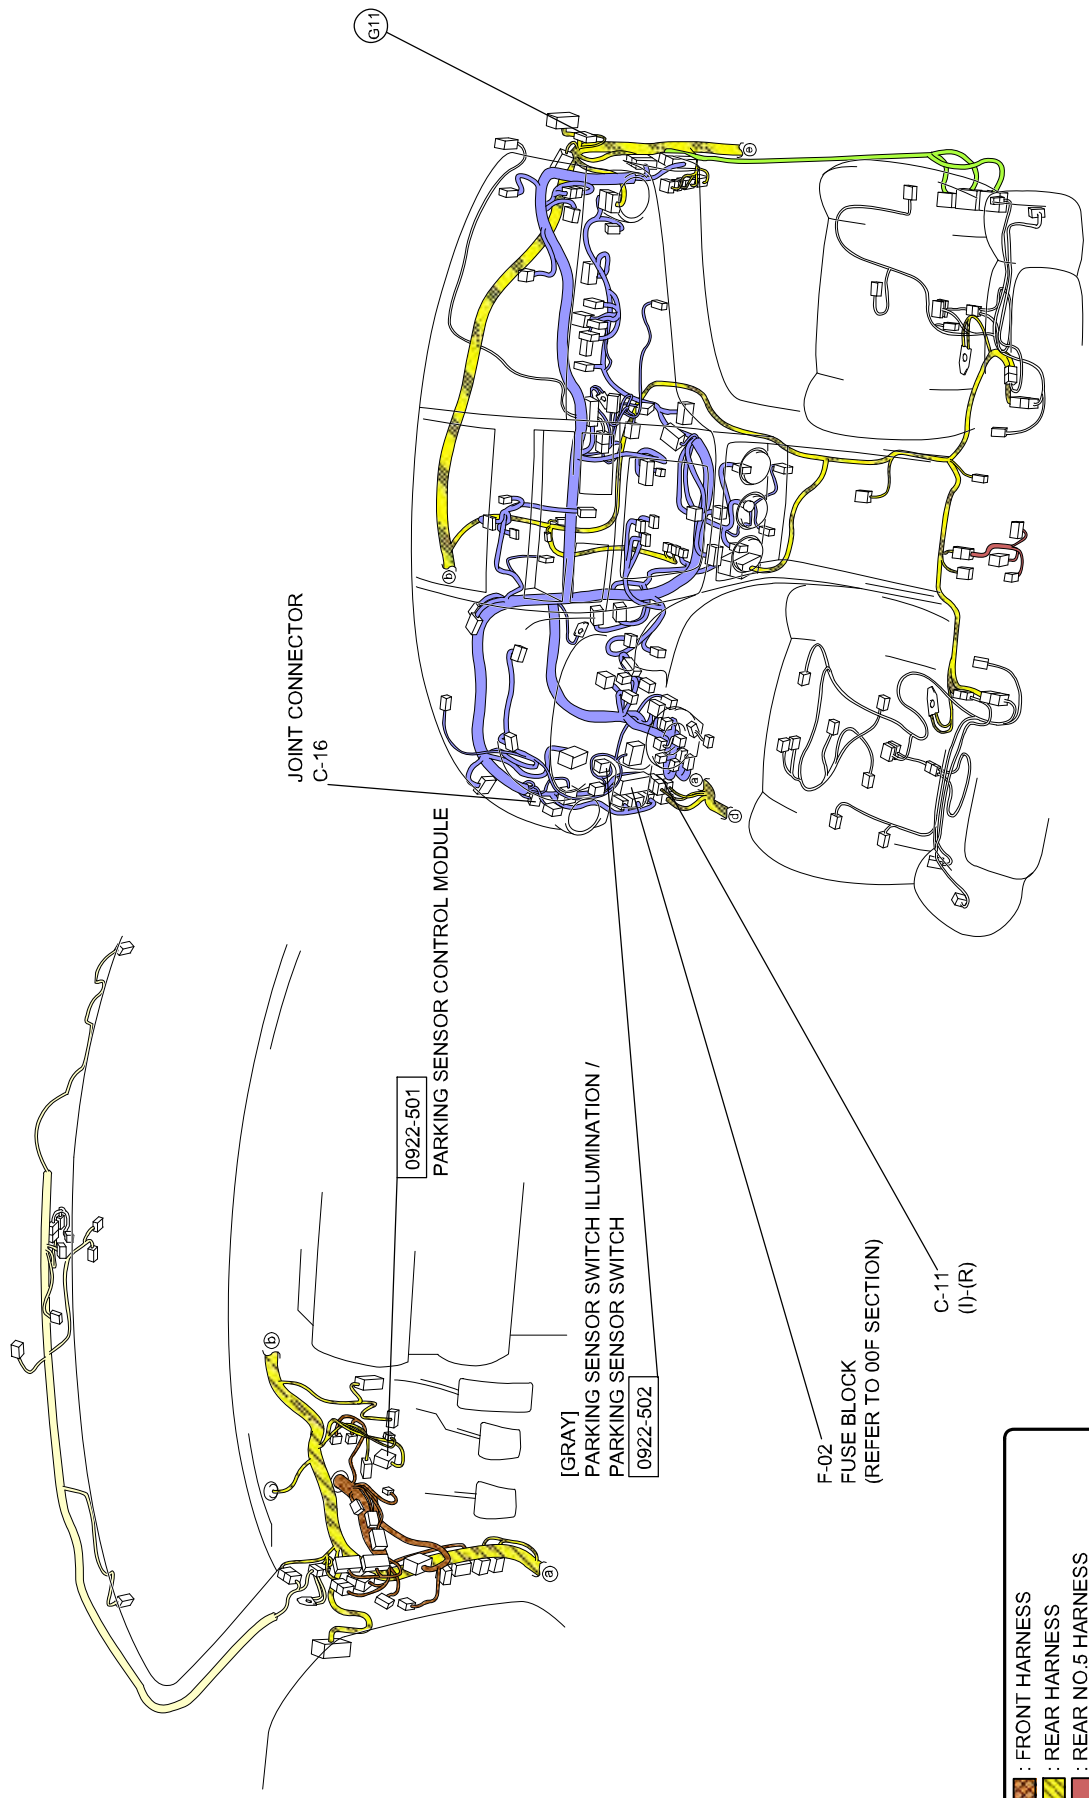
<p>0922-501 PARKING SENSOR CONTROL MODULE</p>	<p>0922-502 PARKING SENSOR SWITCH ILLUMINATION / PARKING SENSOR SWITCH</p>	

PARKING SENSOR SYSTEM

0922-5a




	: FRONT HARNESS
	: REAR HARNESS
	: REAR NO.5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT NO.2 HARNESS

PARKING SENSOR SYSTEM

0922-5a

C-11


INSTRUMENT PANEL HARNESS-REAR HARNESS

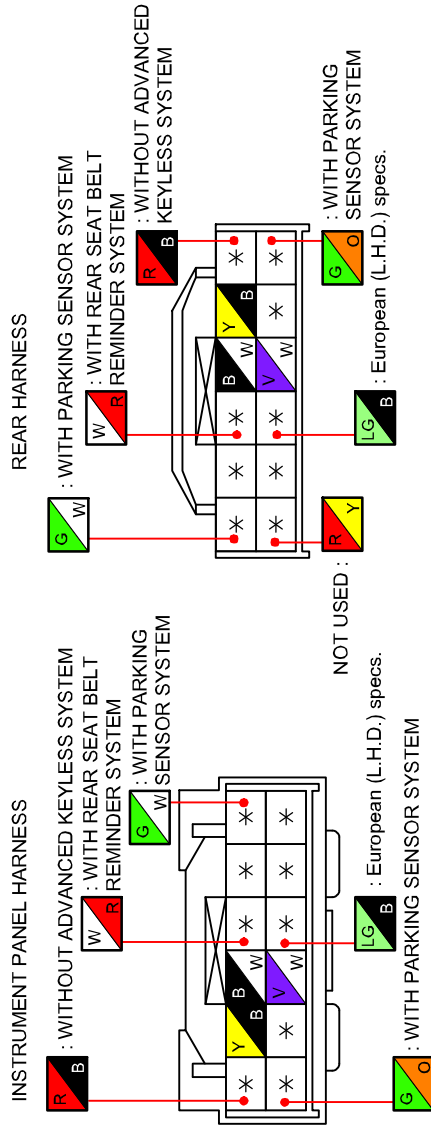




C-16

JOINT CONNECTOR

 INSTRUMENT PANEL HARNESS

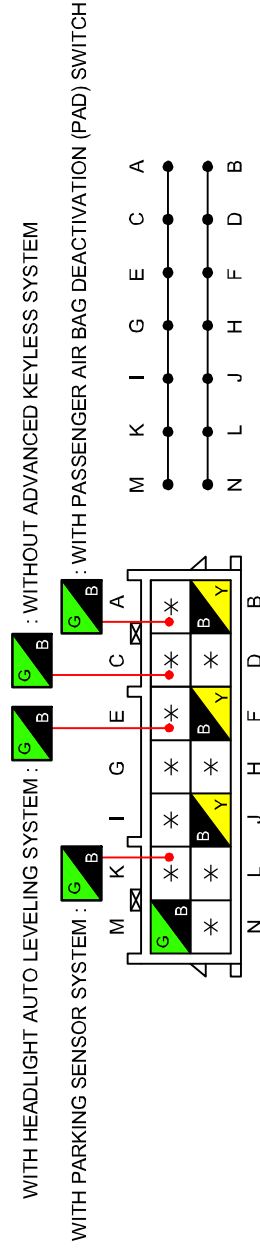

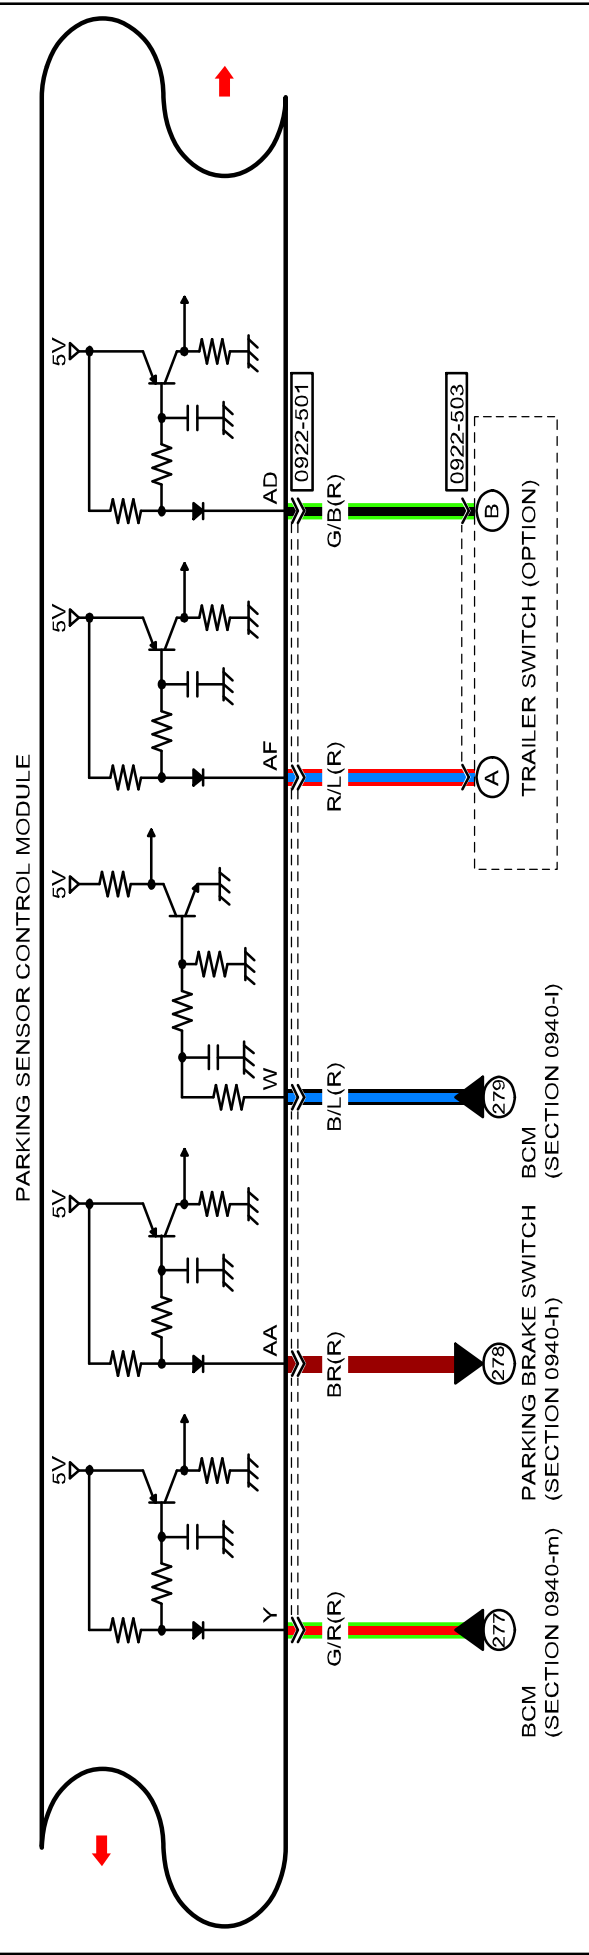

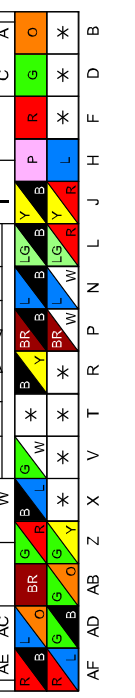






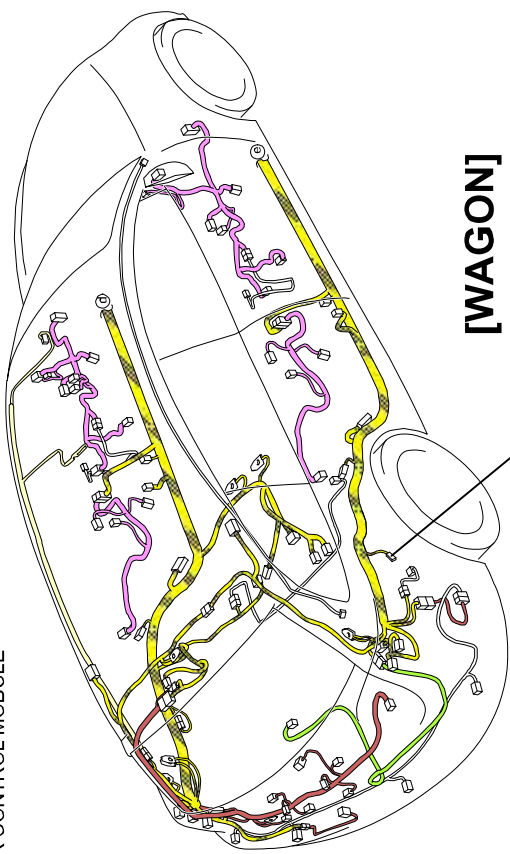
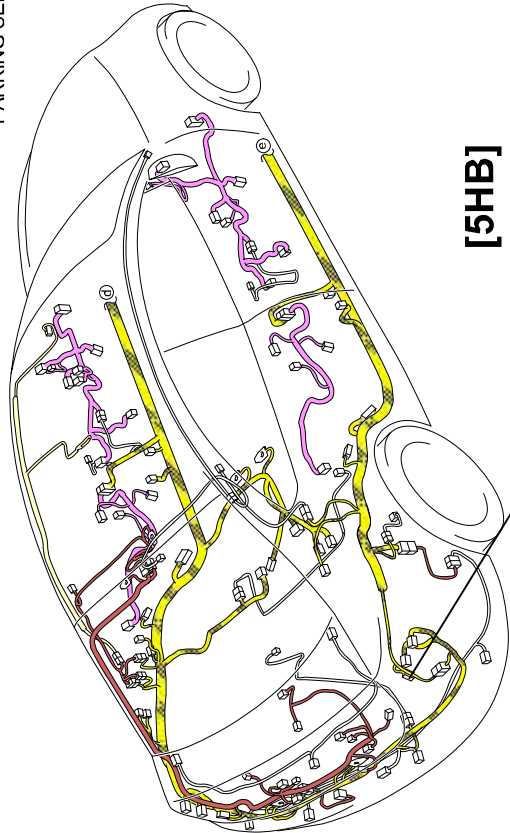
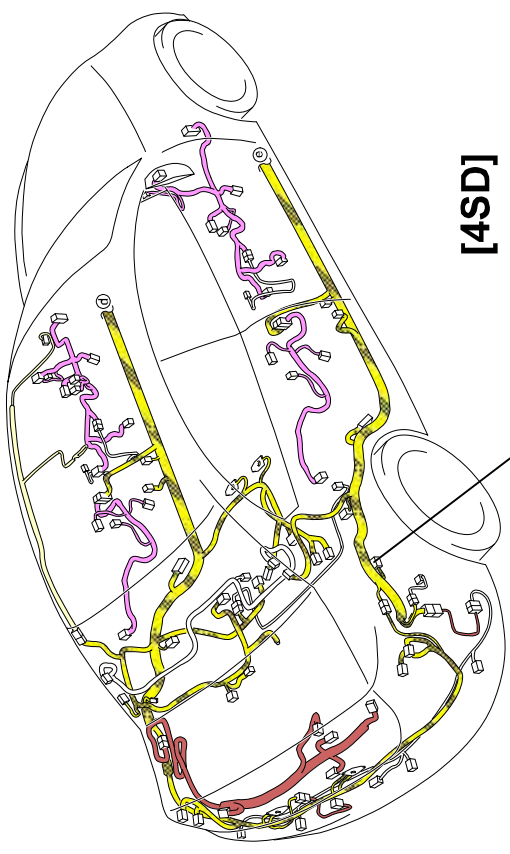
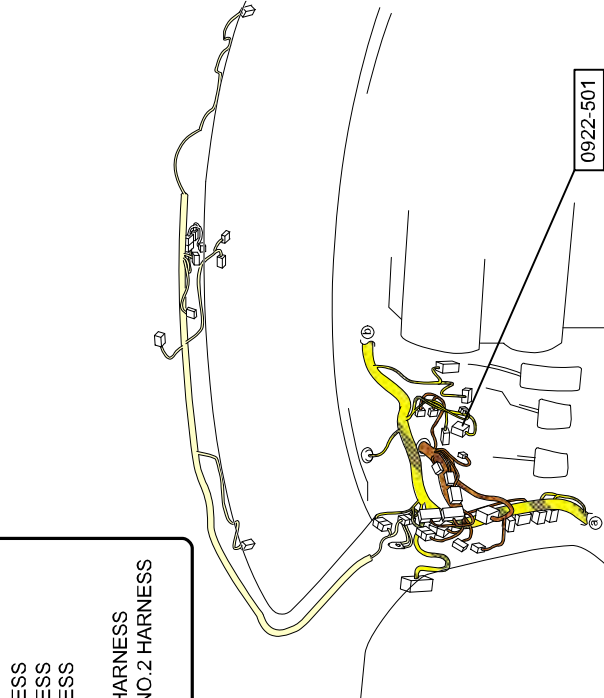


<p>0922-501 PARKING SENSOR CONTROL MODULE</p>				<p>0922-503 TRAILER SWITCH (OPTION)</p> 
				


PARKING SENSOR SYSTEM

0922-5b

-  : FRONT HARNESS
-  : REAR HARNESS
-  : REAR NO.2 HARNESS
-  : REAR NO.3 HARNESS
-  : REAR NO.4 HARNESS
-  : DOOR HARNESS
-  : INTERIOR LIGHT HARNESS
-  : INTERIOR LIGHT NO.2 HARNESS
-  : FLOOR HARNESS




PARKING SENSOR CONTROL MODULE

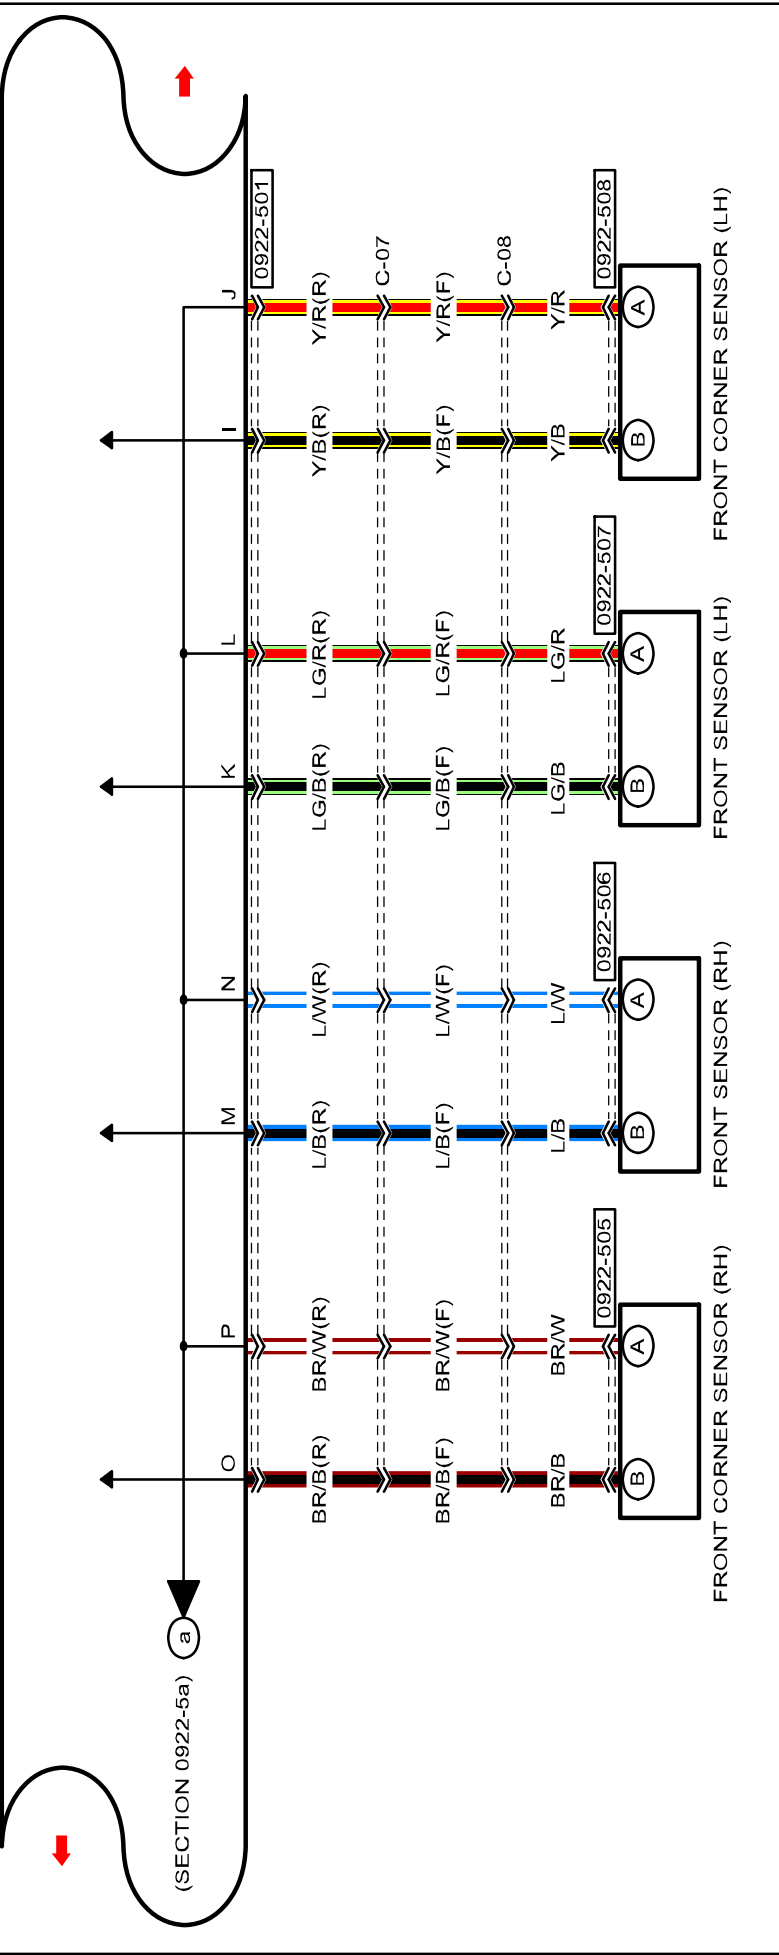

<p>0922-501 PARKING SENSOR CONTROL MODULE</p>	<p>0922-505 FRONT CORNER SENSOR (RH)</p>	<p>0922-506 FRONT SENSOR (RH)</p>	<p>0922-507 FRONT SENSOR (LH)</p>	<p>0922-508 FRONT CORNER SENSOR (LH)</p>
---	--	---------------------------------------	---------------------------------------	--


[EXCEPT MZR-CD (RF Turbo)]

[MZR-CD (RF Turbo)]

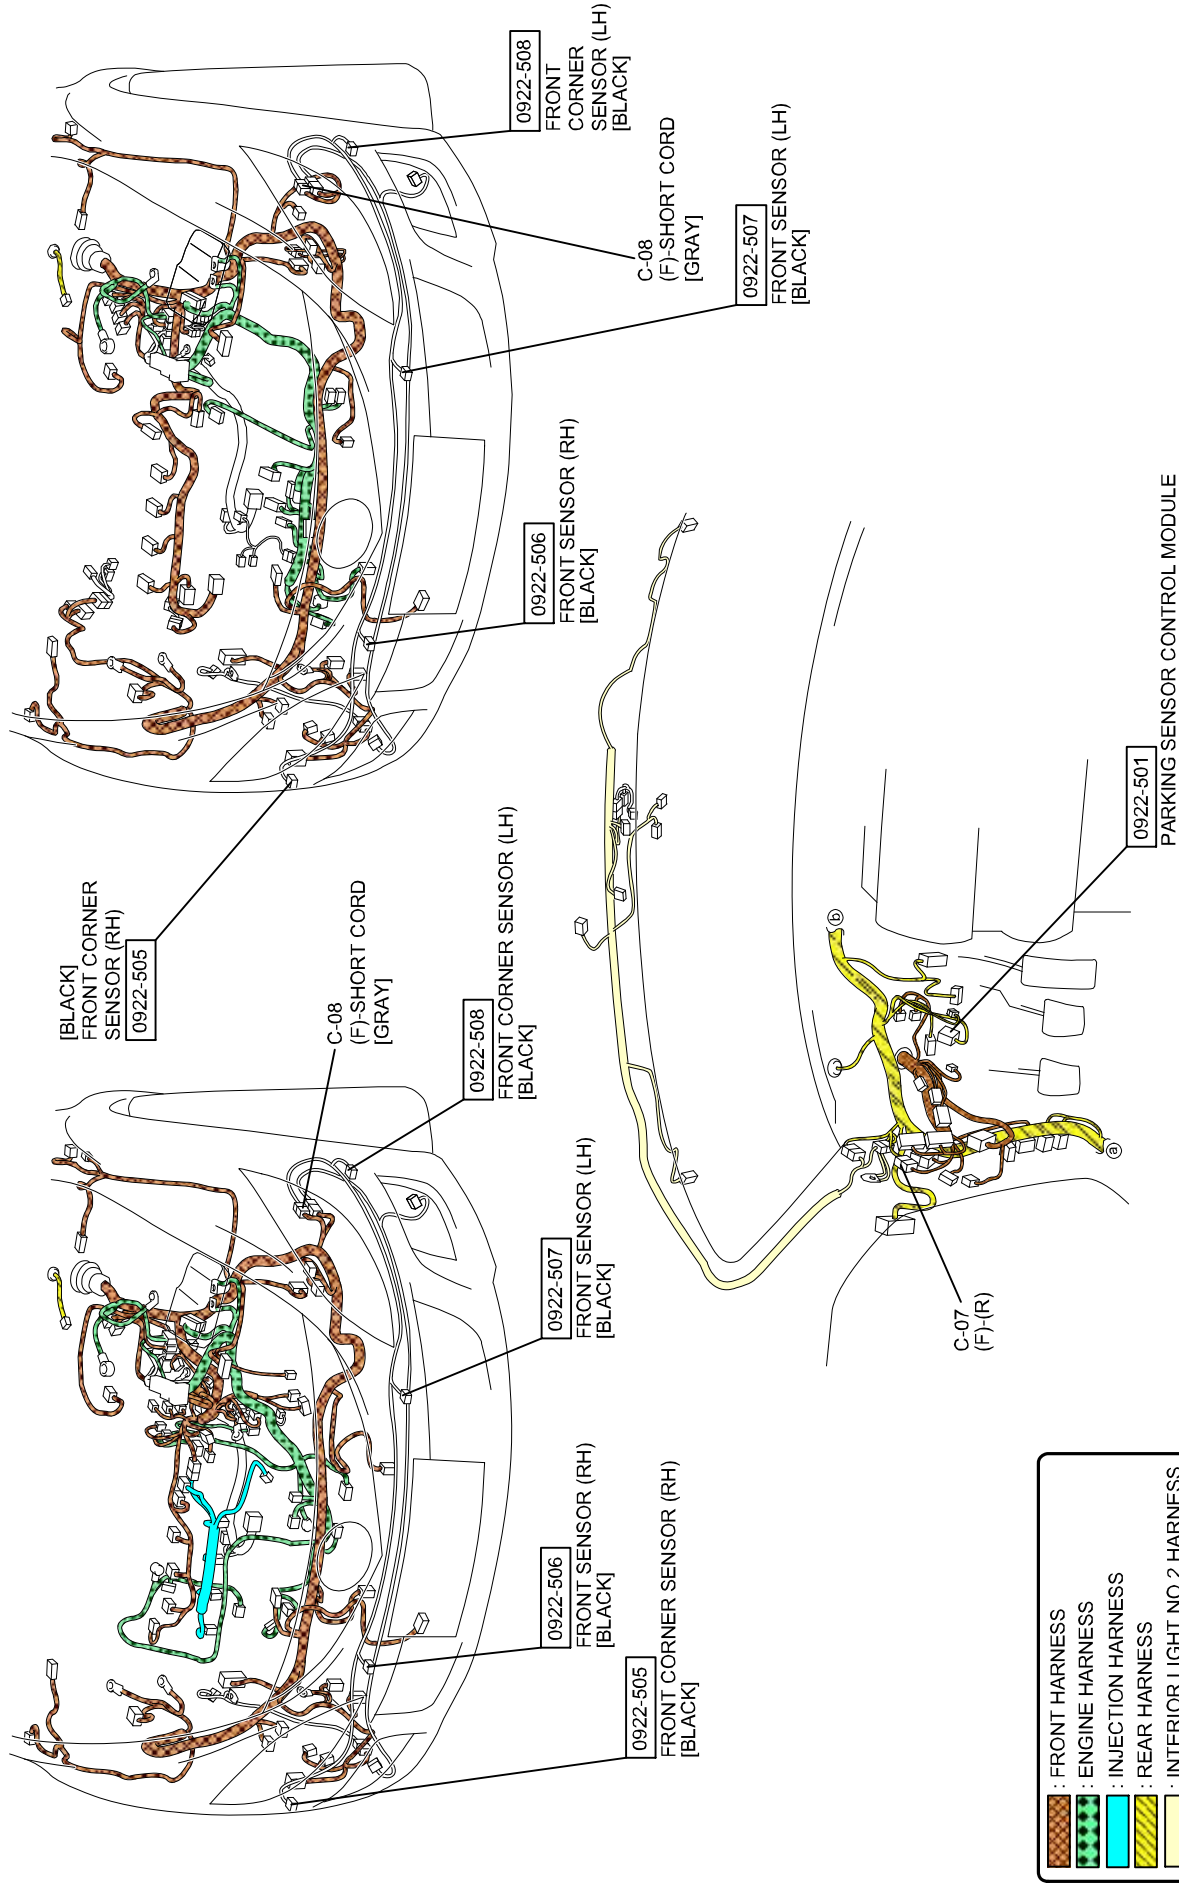


C-07

FRONT HARNESS-REAR HARNESS

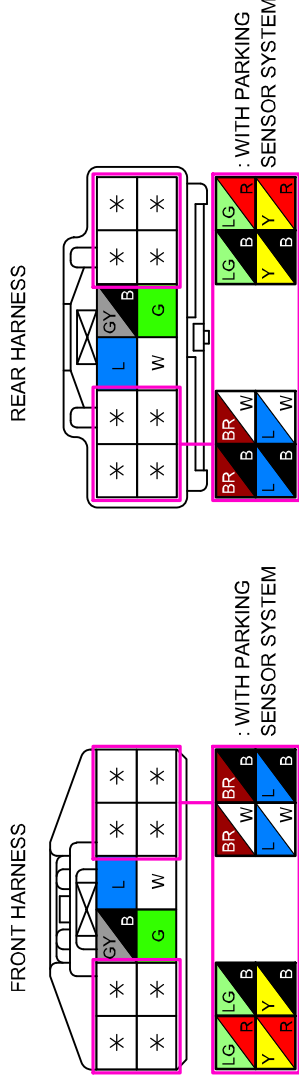


C-08

FRONT HARNESS-SHORT CORD

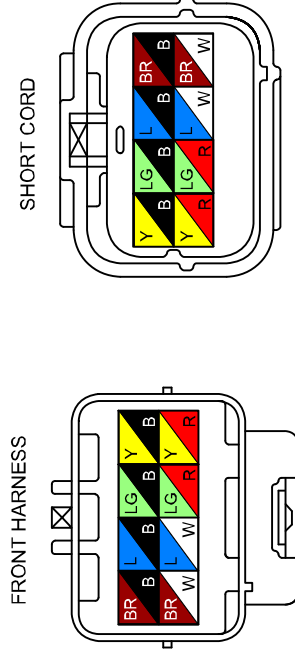



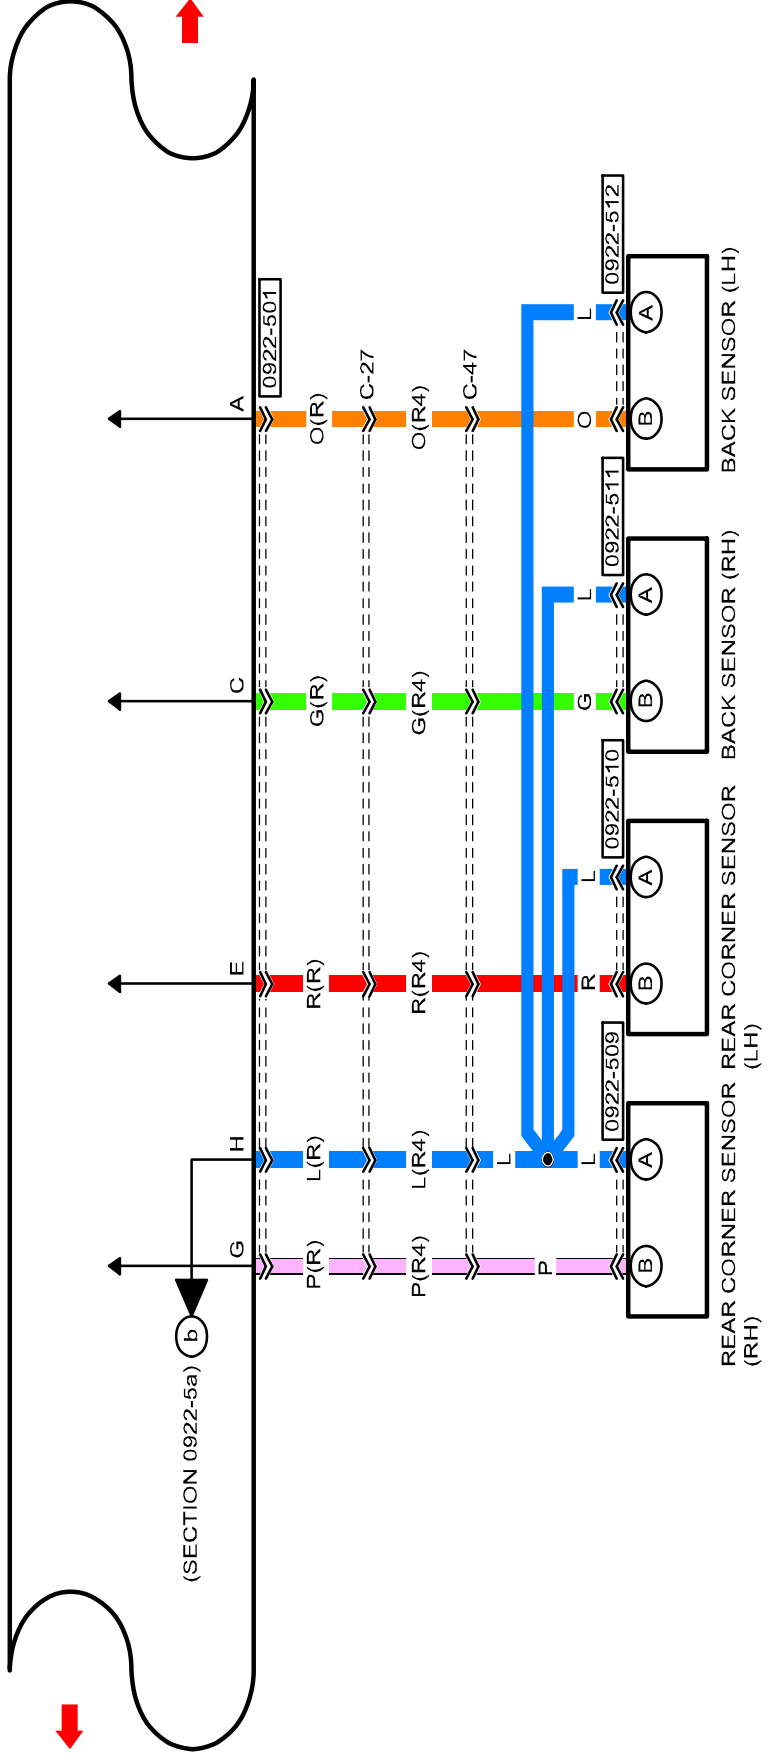






PARKING SENSOR CONTROL MODULE






<p>0922-501 PARKING SENSOR CONTROL MODULE</p>	<p>0922-509 REAR CORNER SENSOR (RH)</p>	<p>0922-510 REAR CORNER SENSOR (LH)</p>	<p>0922-511 BACK SENSOR (RH)</p>	<p>0922-512 BACK SENSOR (LH)</p>

PARKING SENSOR SYSTEM

0922-5d

	: FRONT HARNESS
	: REAR HARNESS
	: REAR NO.2 HARNESS
	: REAR NO.3 HARNESS
	: REAR NO.4 HARNESS
	: DOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO.2 HARNESS
	: FLOOR HARNESS

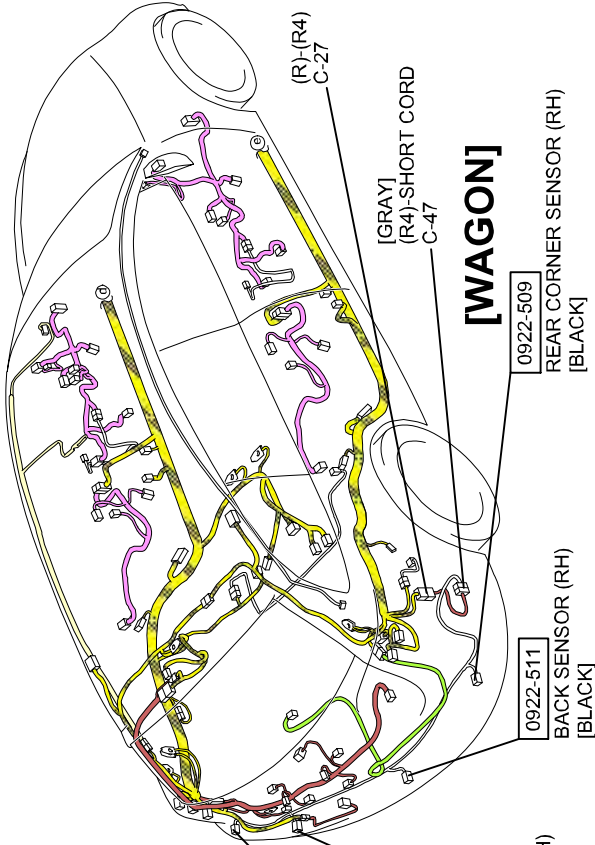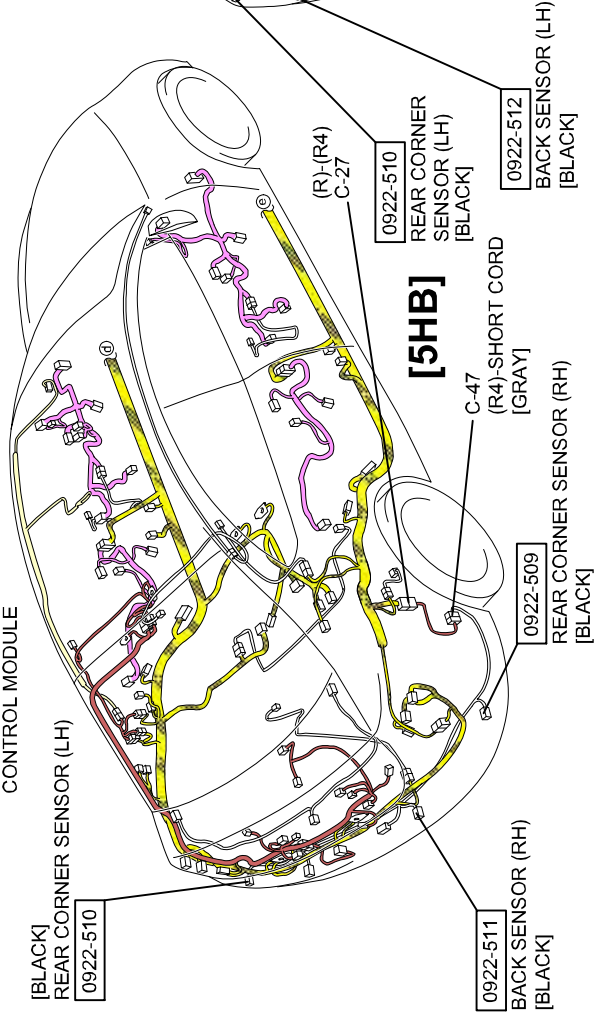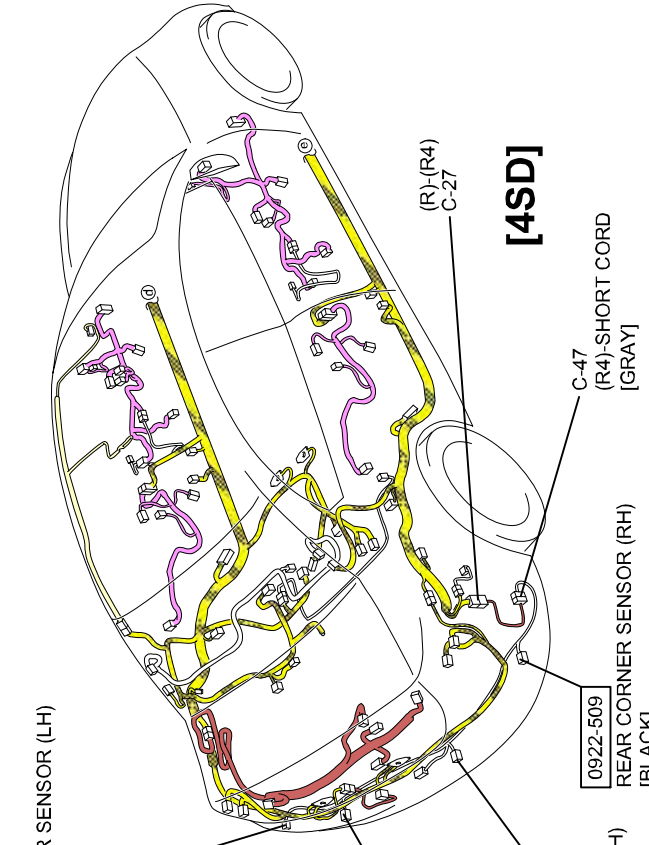


PARKING SENSOR SYSTEM

0922-5d


C-27

REAR HARNESS-REAR NO.4 HARNESS

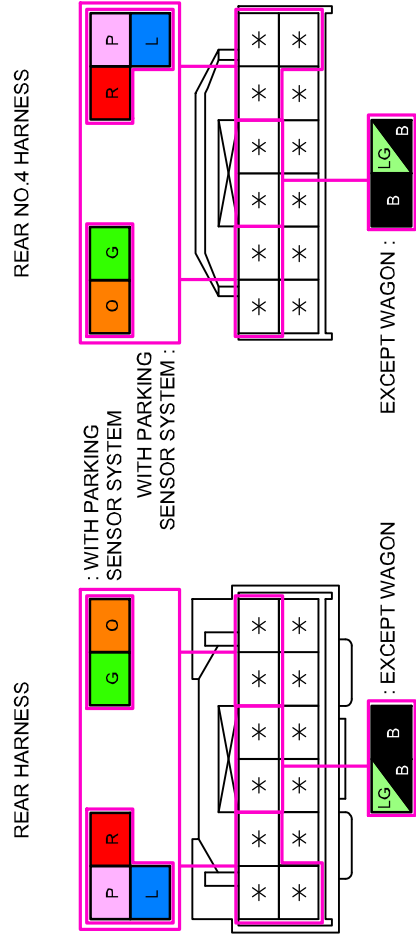

C-47

REAR NO.4 HARNESS-SHORT CORD

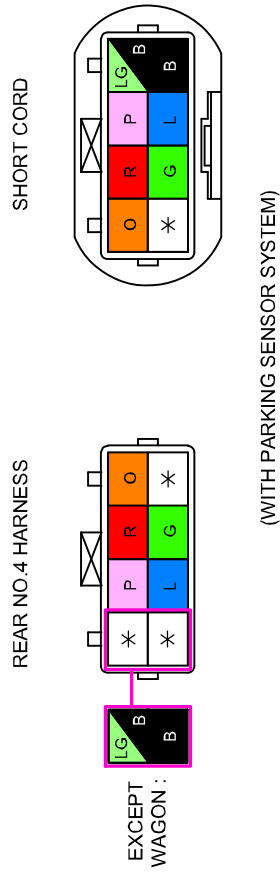


PARKING SENSOR SYSTEM

0922-5e

@1 : WITHOUT ADVANCED KEYLESS SYSTEM
 @2 : WITH ADVANCED KEYLESS SYSTEM
 @8 : 4SD

PARKING SENSOR CONTROL MODULE

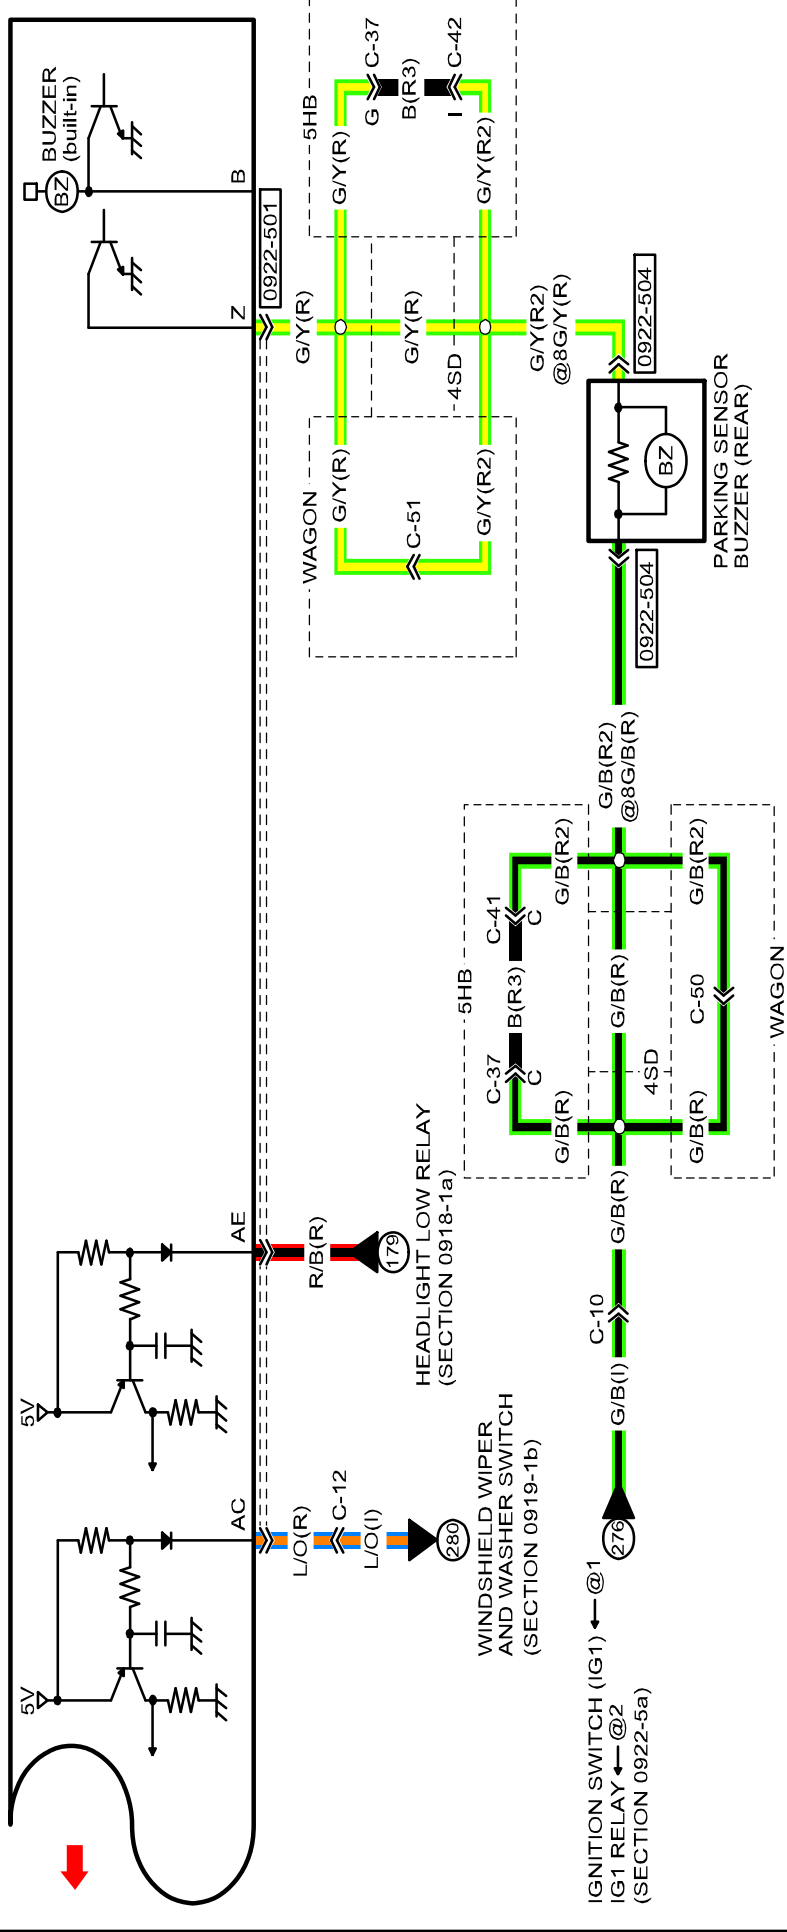


0922-501 PARKING SENSOR CONTROL MODULE			0922-504 PARKING SENSOR BUZZER (REAR)	

PARKING SENSOR SYSTEM

0922-5e

[GRAY]
PARKING SENSOR BUZZER (REAR)
0922-504

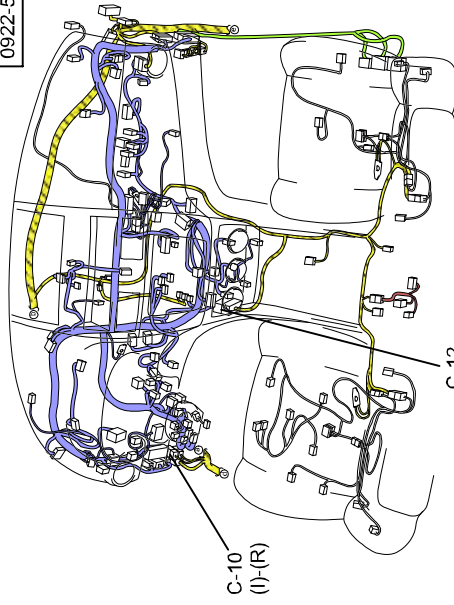


C-12 (L)-(R)
[GRAY]




	: FRONT HARNESS
	: REAR HARNESS
	: REAR NO. 2 HARNESS
	: REAR NO. 3 HARNESS
	: REAR NO. 4 HARNESS
	: REAR NO. 5 HARNESS
	: INSTRUMENT PANEL HARNESS
	: FLOOR HARNESS
	: INTERIOR LIGHT HARNESS
	: INTERIOR LIGHT NO. 2 HARNESS
	: DOOR HARNESS

0922-501
PARKING SENSOR CONTROL MODULE

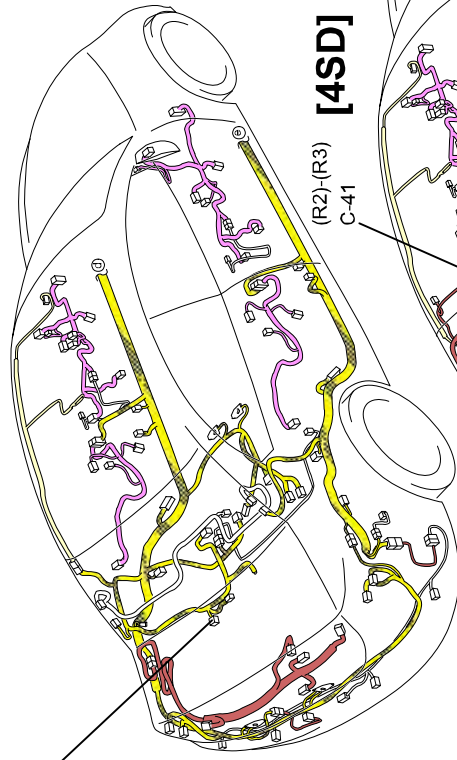


C-37 (R)-(R3)

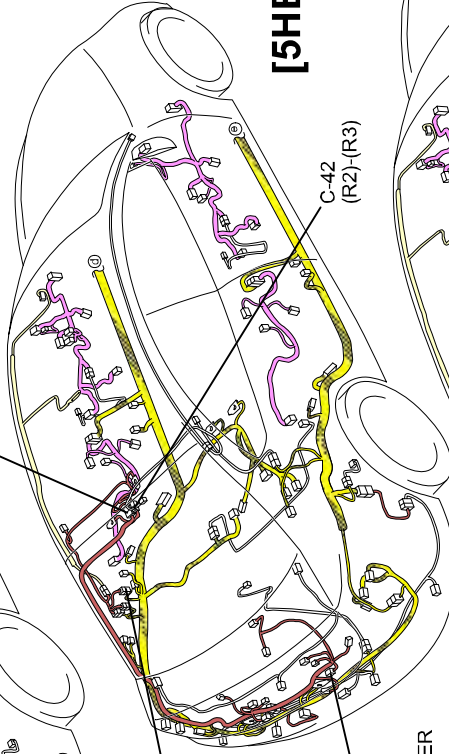

0922-504
PARKING SENSOR BUZZER (REAR)
[GRAY]

(R)-(R2)
C-50

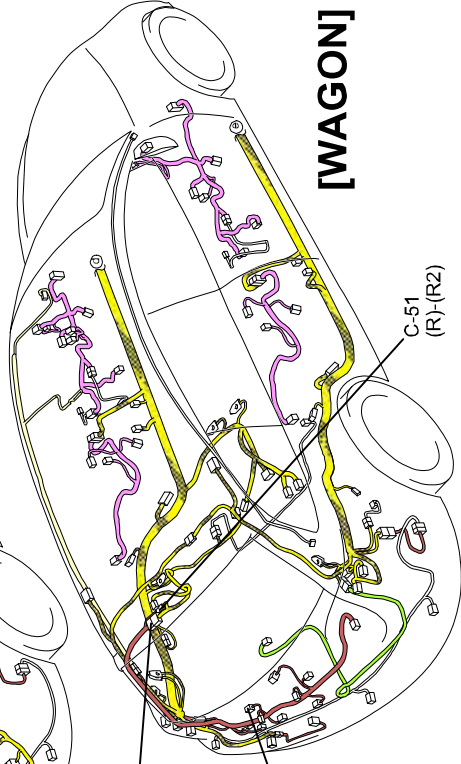


0922-504
PARKING SENSOR BUZZER (REAR)
[GRAY]


C-10

INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

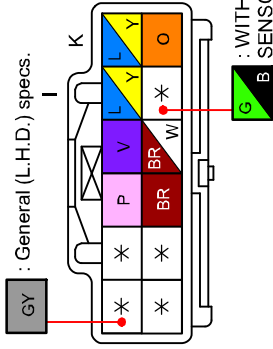


REAR HARNESS

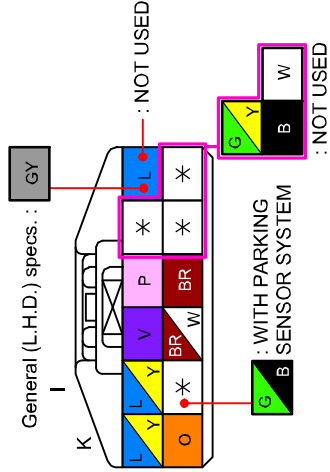


C-12





INSTRUMENT PANEL HARNESS-REAR HARNESS

INSTRUMENT PANEL HARNESS

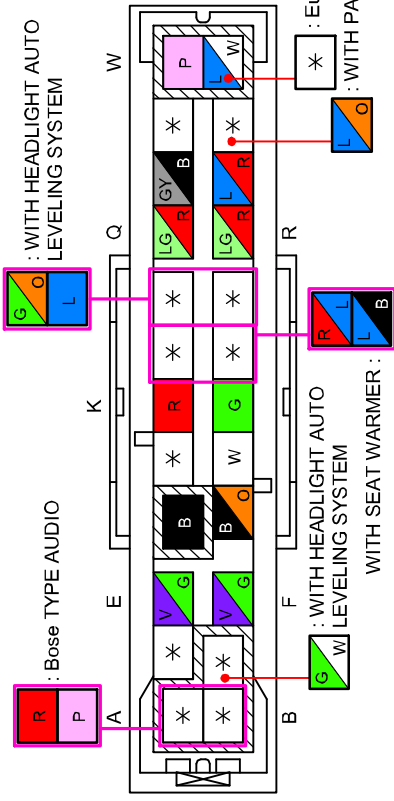

REAR HARNESS

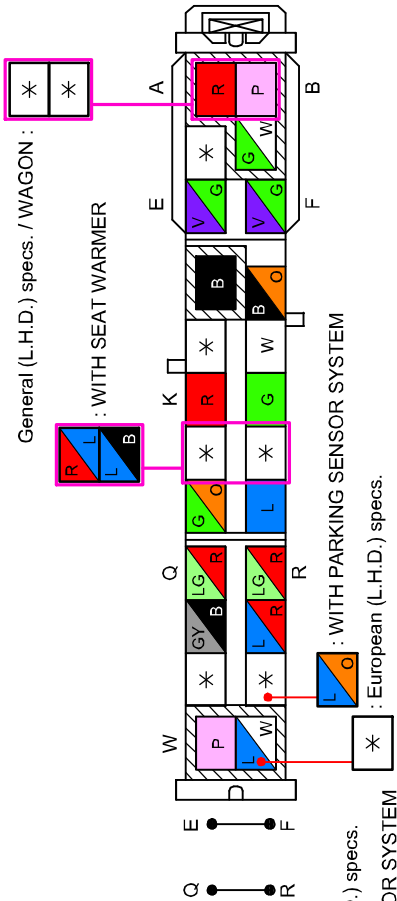


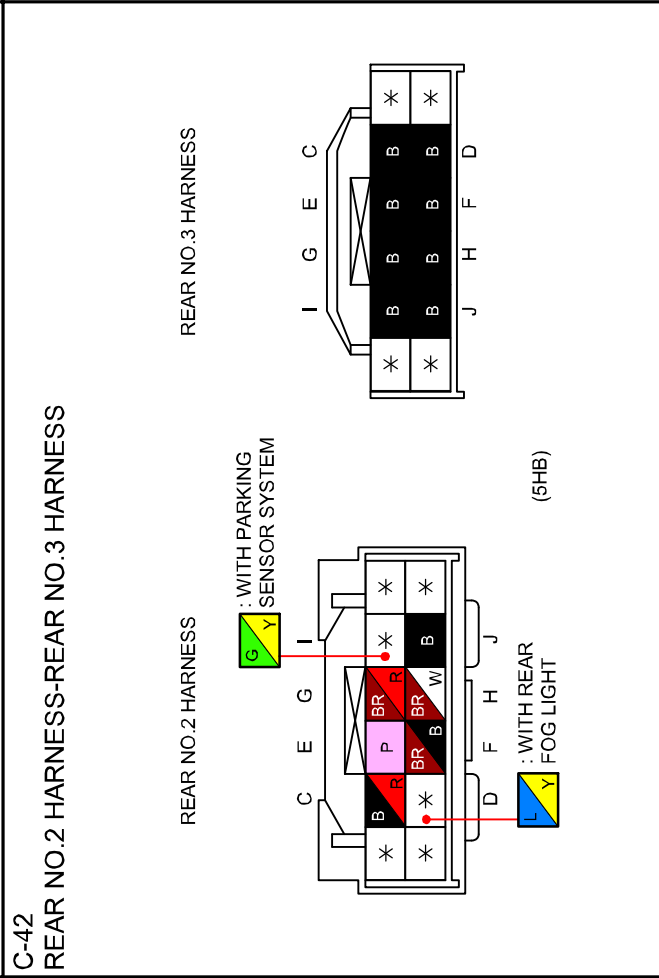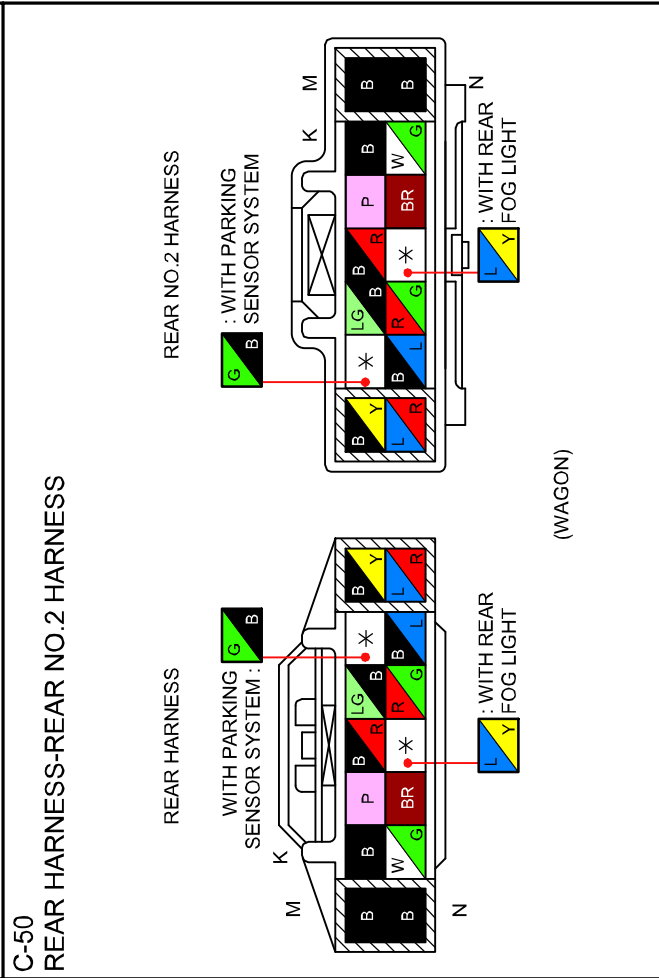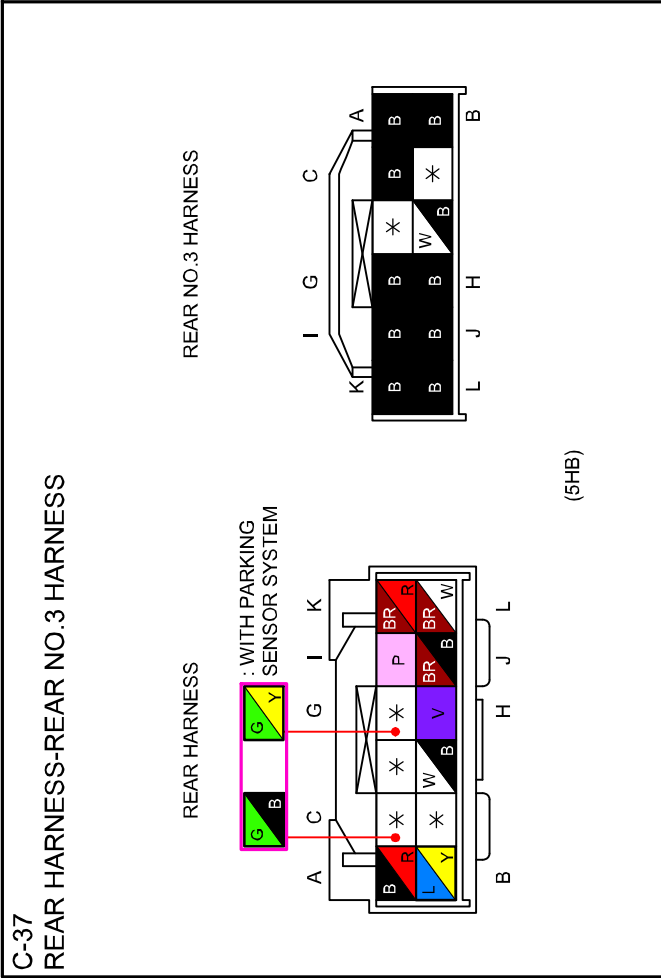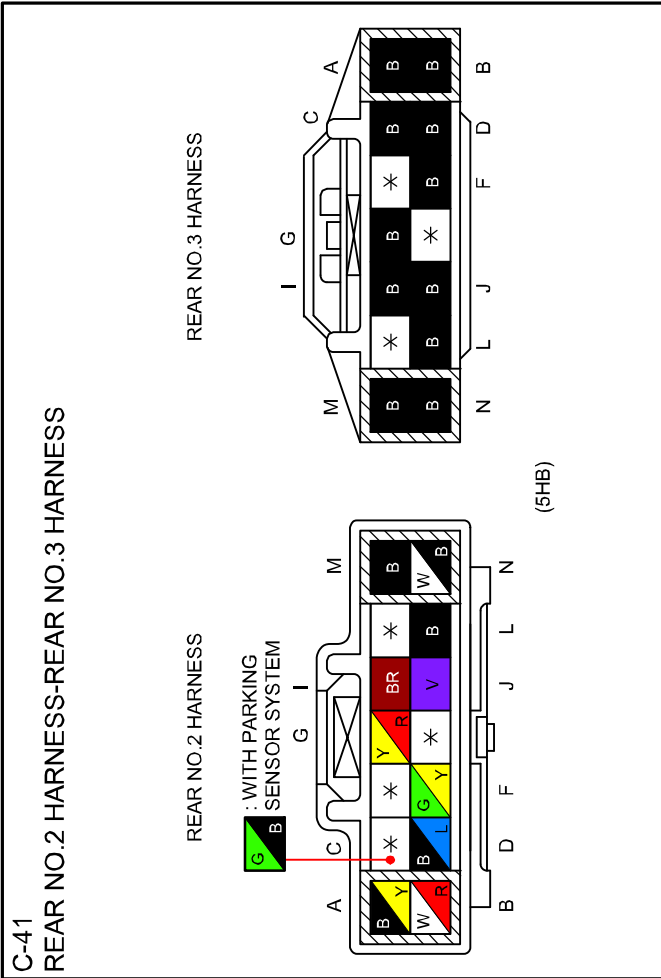

PARKING SENSOR SYSTEM

C-51

REAR HARNESS-REAR NO.2 HARNESS

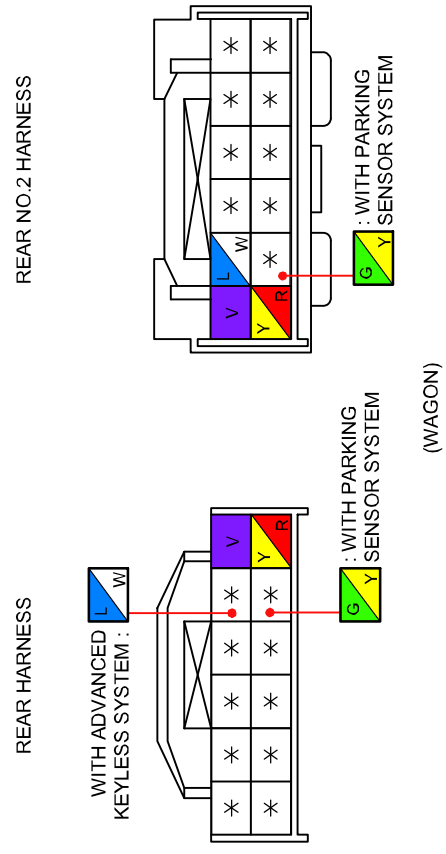

--	--